

LED	WHAT HAPPENED	WHAT TO DO
 GLOWING	USB-Link is connected to PC, Mac or smartphone; GATE ETU is not connected or PC/Mac driver is not installed	a. Connect GATE ETU b. Install the driver: www.gatee.eu/drivers
 BLINKING	USB-Link does not have firmware installed	Install USB-Link firmware via GCS
 GLOWING	USB-Link is connected to PC, Mac or smartphone and GATE ETU	Enjoy weapon configuration of tomorrow
 BLINKING	USB-Link is properly connected, but GATE ETU does not have firmware installed	Install GATE ETU firmware via GCS
 GLOWING	USB-Link is transmitting data	Wait until data is transmitted
 GLOWING	Communication with GATE ETU was interrupted while saving settings, which may have been transmitted incorrectly	Check connection between USB-Link and GATE ETU